


All models

## Special tools

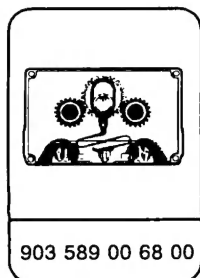

Soak felt parts of cleaning cassette with cleaning solution.

Insert cleaning cassette and play for about 30 seconds.

On units with auto reverse, turn cassette over and play for another 30 seconds.